


**Note:**

1. Liner sheets tack welded together at overlap to form temporary bond prior to welding.
2. Grinding not to exceed 1/4" (6.4 mm) past "squeeze-out" on either side. Proper care should be taken in not removing too much material when grinding.

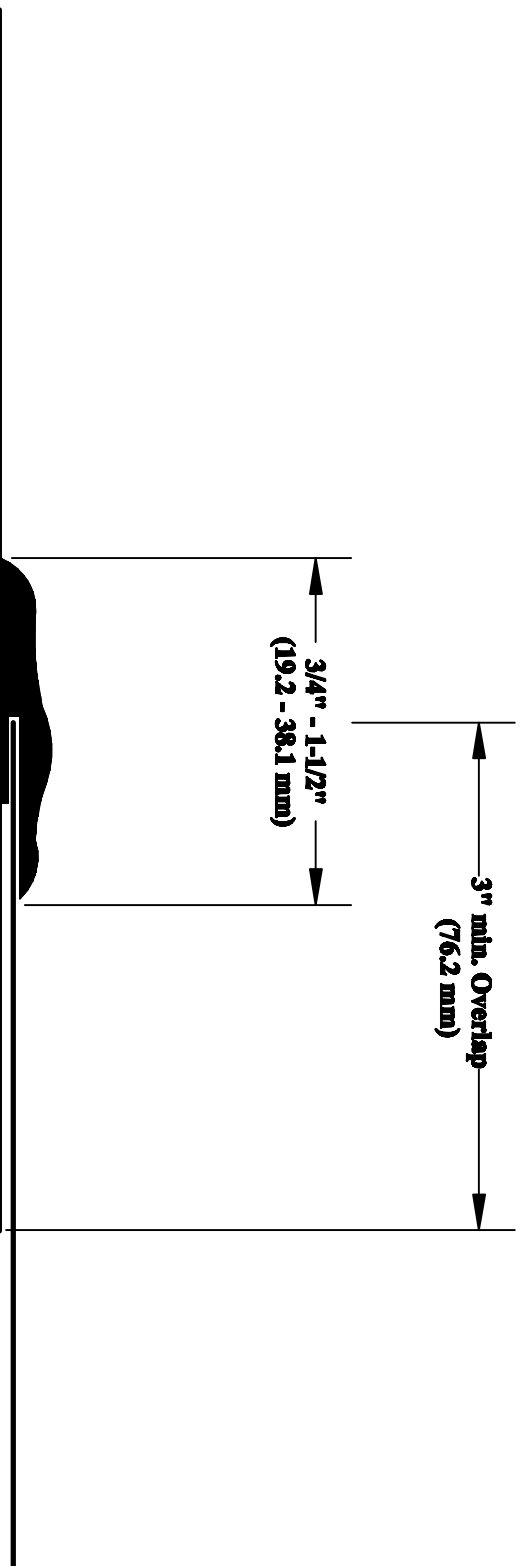

**Firestone**

20 Geomembrance that Work 09

**FP-R Geomembrane**

Extrusion Welded Seam

**Detail No.** ML-S-2

**Systems** Polypropylene