


- NOTES:**
1. REMOVE ALL EXISTING FLASHINGS, LEAD, ETC. PIPE SURFACE MUST BE FREE OF ALL RUST, GREASE, ETC.
 2. PIPE MUST BE ANCHORED TO ASSURE STABILITY.

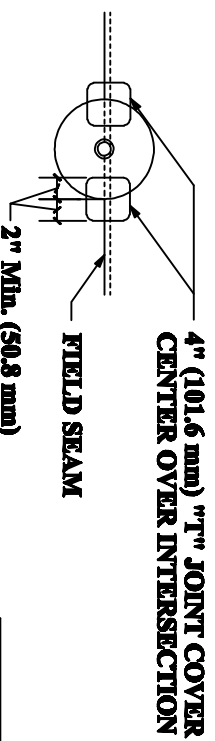

PLAN VIEW AT FIELD SEAM

Firestone <small>20 Geomembranes that Work 09</small>	PP-R Geomembrane Pre – Fabricated Pipe / Tube Flashing	Detail No. ML-P-1 Systems Polypropylene