


- NOTES:
1. REFER TO FIRESTONE WEBSITE FOR THE MOST CURRENT INFORMATION.
  2. APPLY LAP SEALANT ON CUT EDGES OF REINFORCED MEMBRANE AND PERIMETER OF QUICKSEAM CORNER FLASHING. REFER TO LS-9 FOR SEAM EDGE TREATMENT.
  3. REFER TO C-1a FOR DETAILED INSTALLATION INSTRUCTIONS.
  4. USE APPROPRIATE FIRESTONE PRIMER TO CLEAN AND PRIME EPDM MATING SURFACES PRIOR TO INSTALLATION OF QUICKSEAM PRODUCTS.

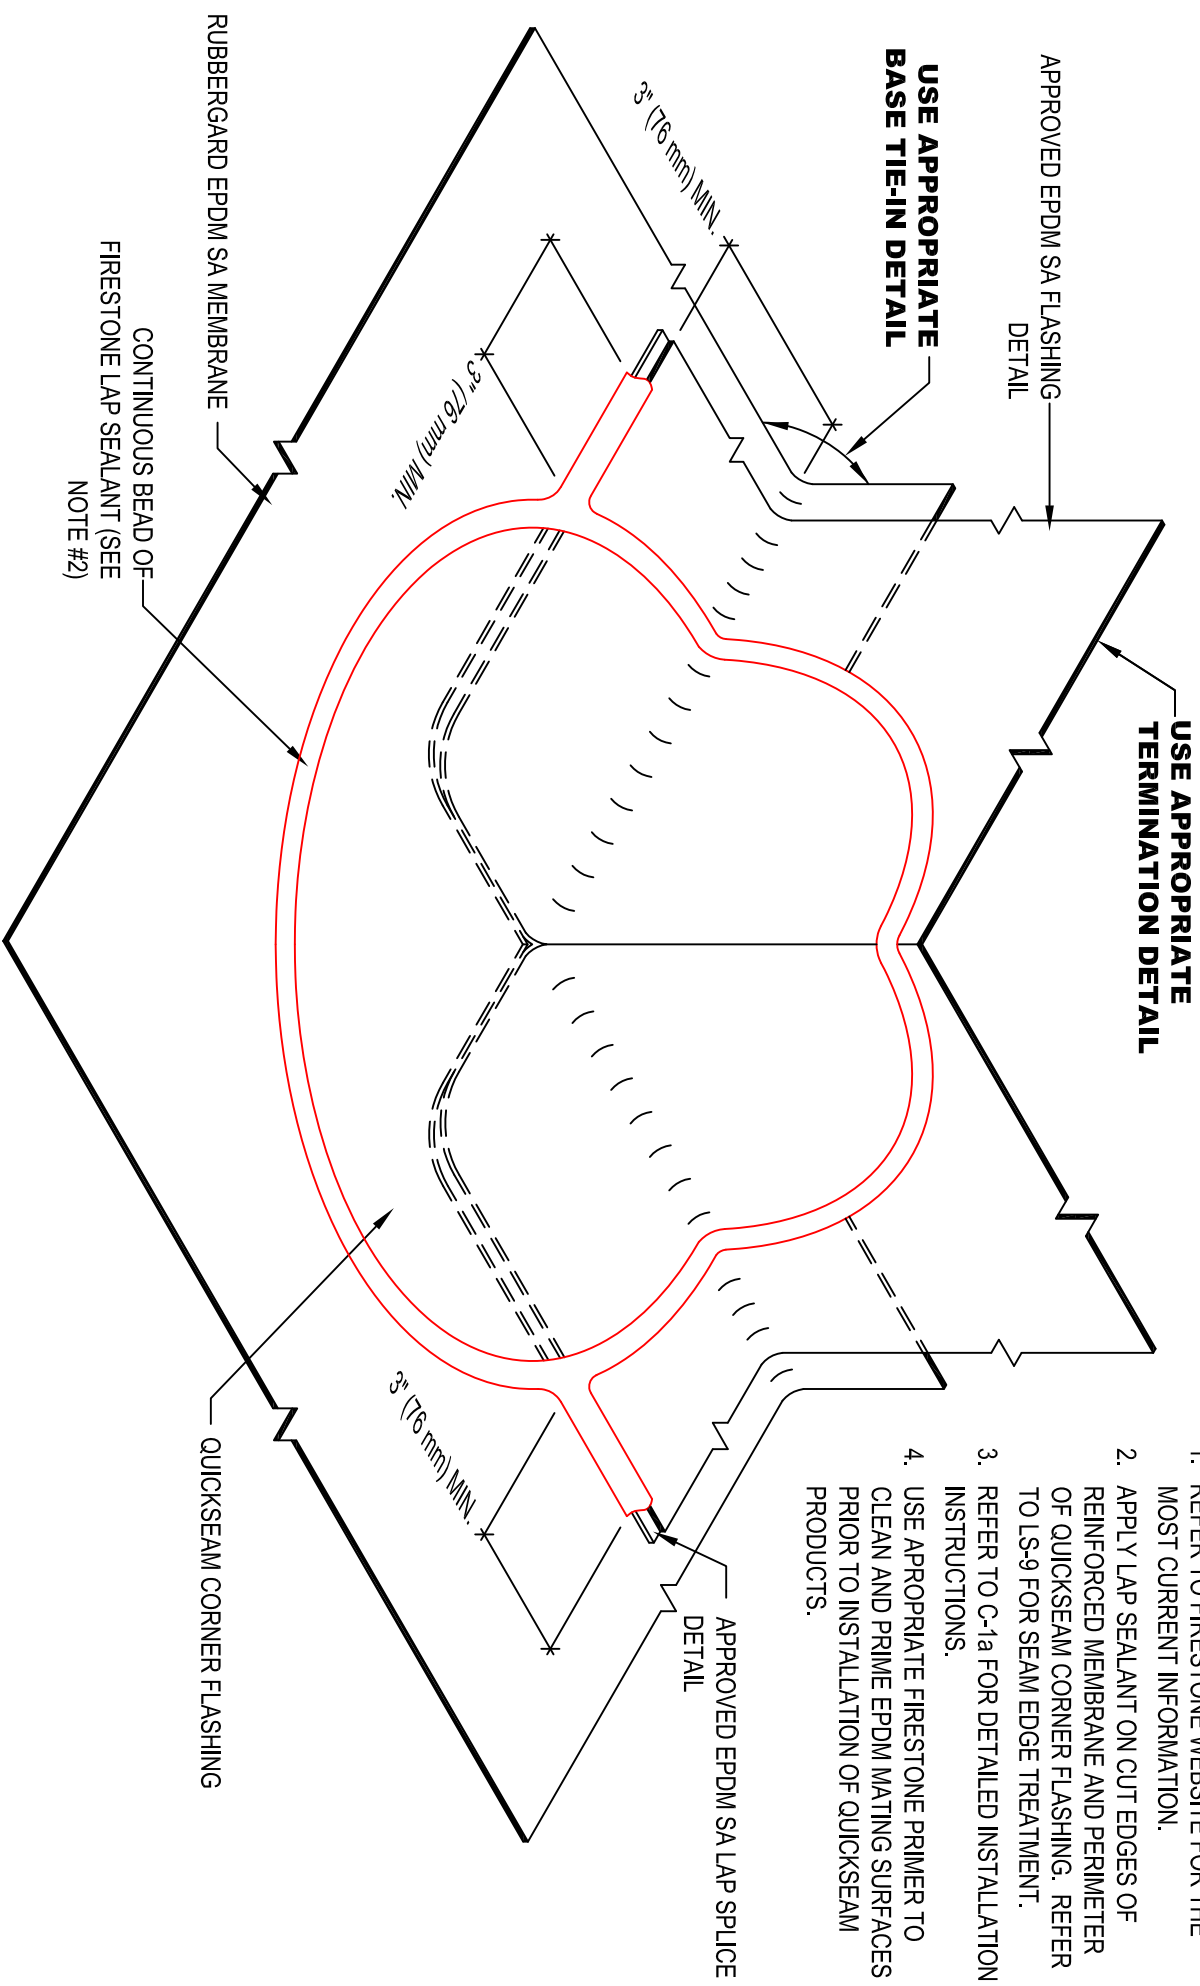

MAXIMUM WARRANTY: **20 YEARS**