


- NOTES:
1. REFER TO FIRESTONE WEBSITE FOR THE MOST CURRENT INFORMATION.
 2. APPLY LAP SEALANT AT 9" QUICKSEAM FORMFLASH AS INDICATED. REFER TO LS-9 FOR SEAM EDGE TREATMENT.
 3. USE APPROPRIATE FIRESTONE PRIMER TO CLEAN AND PRIME EPDM MATING SURFACES PRIOR TO INSTALLATION OF QUICKSEAM PRODUCTS.

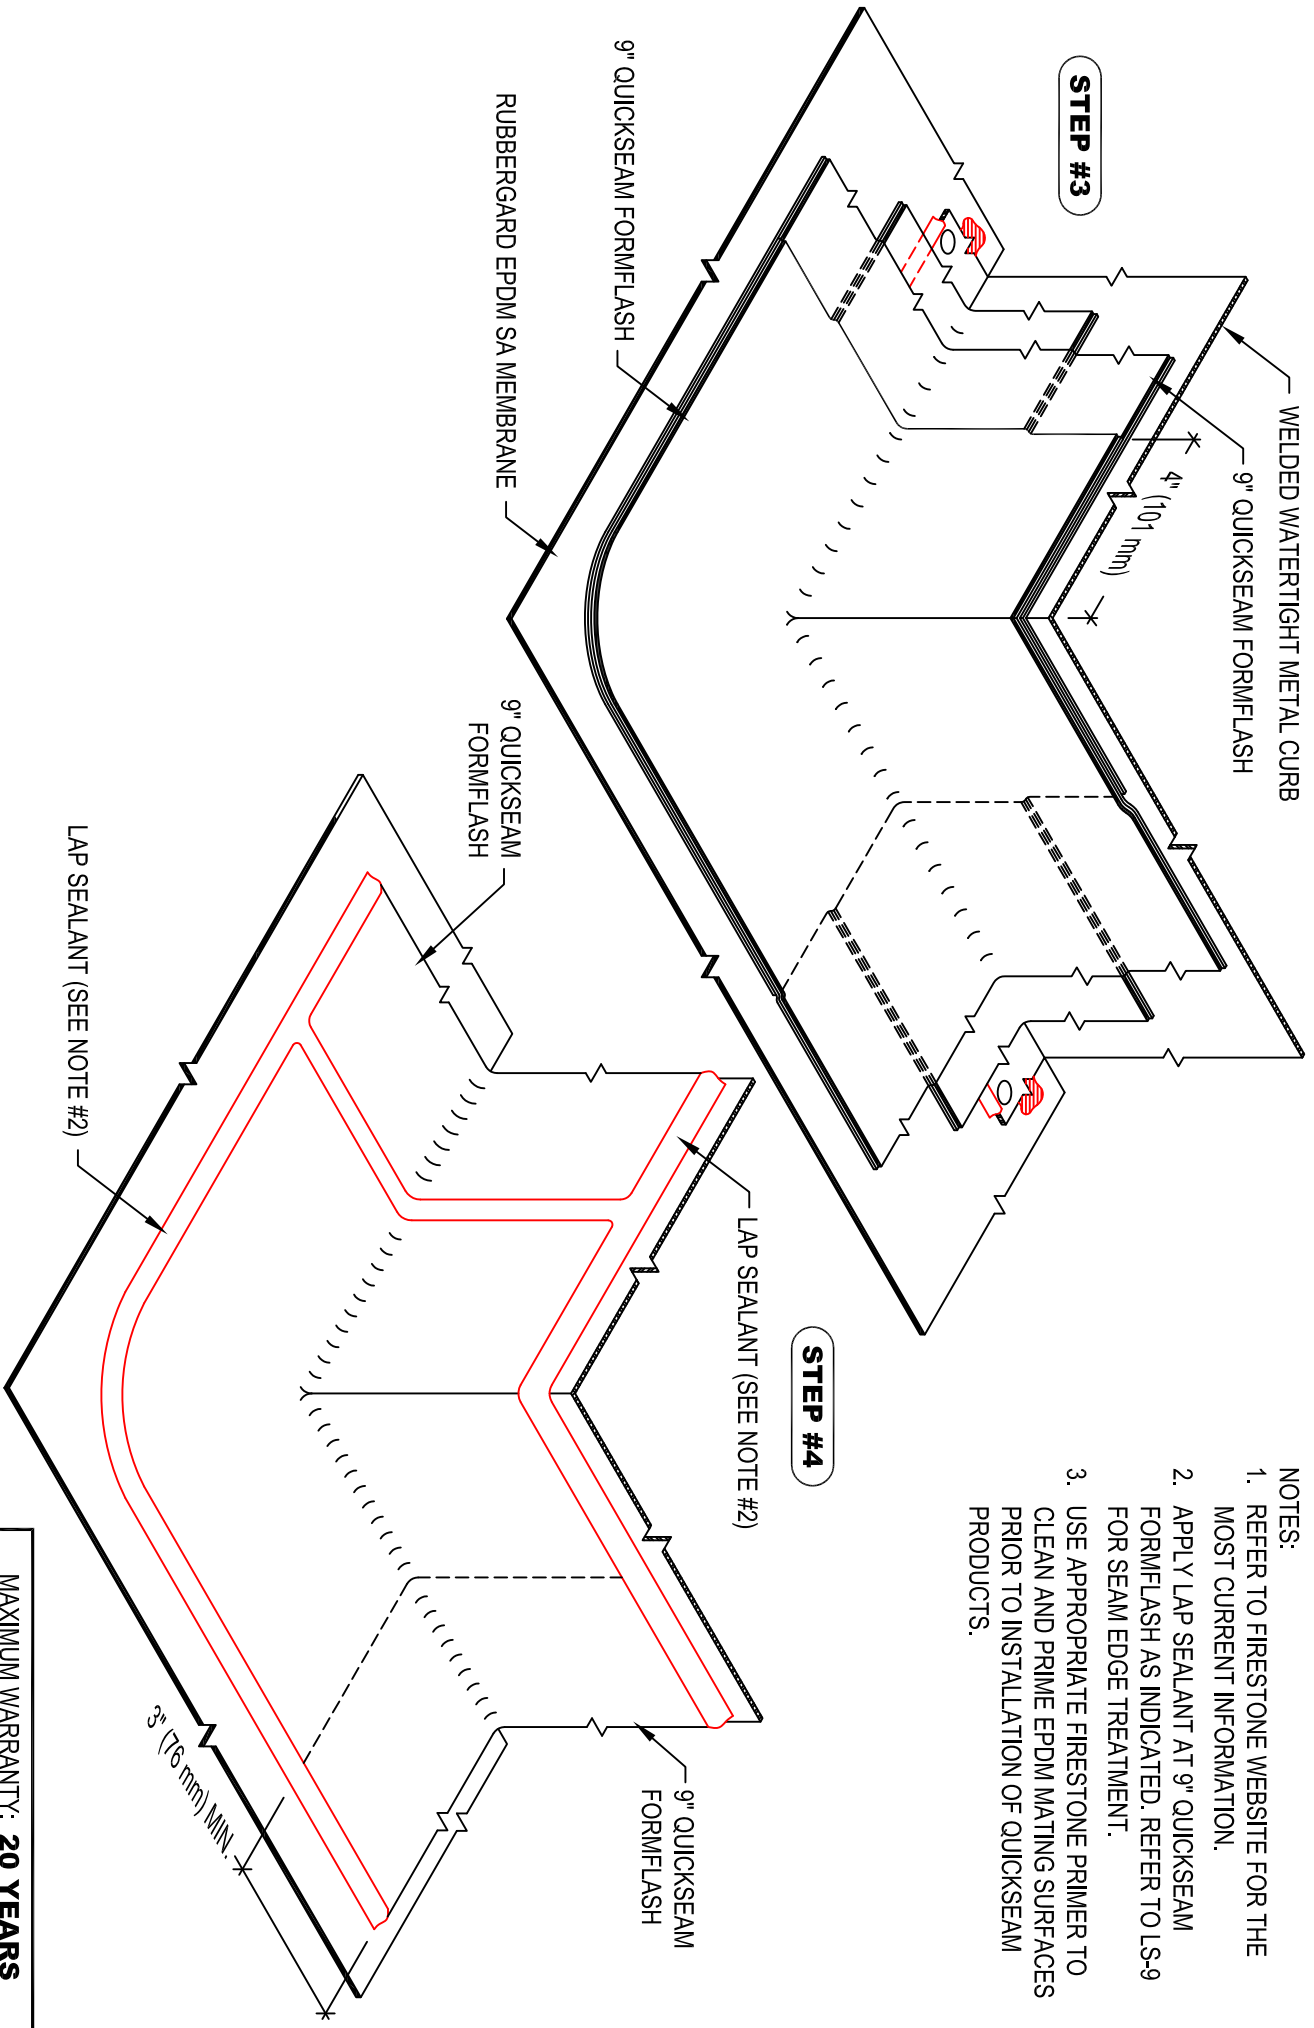

MAXIMUM WARRANTY: **20 YEARS**