


STEP #1

- NOTES:
1. REFER TO FIRESTONE WEBSITE FOR THE MOST CURRENT INFORMATION.
 2. USE APPROPRIATE FIRESTONE PRIMER TO CLEAN AND PRIME EPDM MATING SURFACES PRIOR TO INSTALLATION OF QUICKSEAM PRODUCTS.

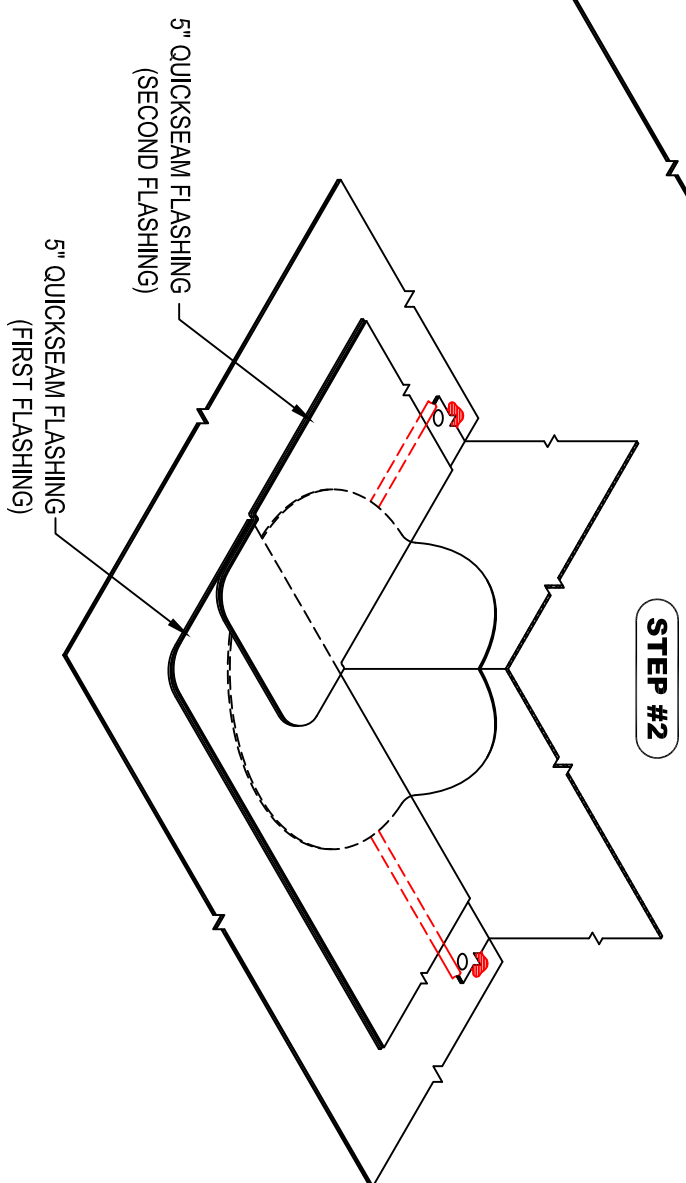

STEP #2

MAXIMUM WARRANTY: **20 YEARS**