


- NOTES:
1. REFER TO FIRESTONE WEBSITE FOR THE MOST CURRENT INFORMATION.
 2. APPLY LAP SEALANT AT 9" QUICKSEAM FORM FLASH AND QUICKSEAM CORNER FLASHING AS INDICATED. REFER TO LS-9 FOR SEAM EDGE TREATMENT.
 3. USE APPROPRIATE FIRESTONE PRIMER TO CLEAN AND PRIME EPDM MATING SURFACES PRIOR TO INSTALLATION OF QUICKSEAM PRODUCTS.

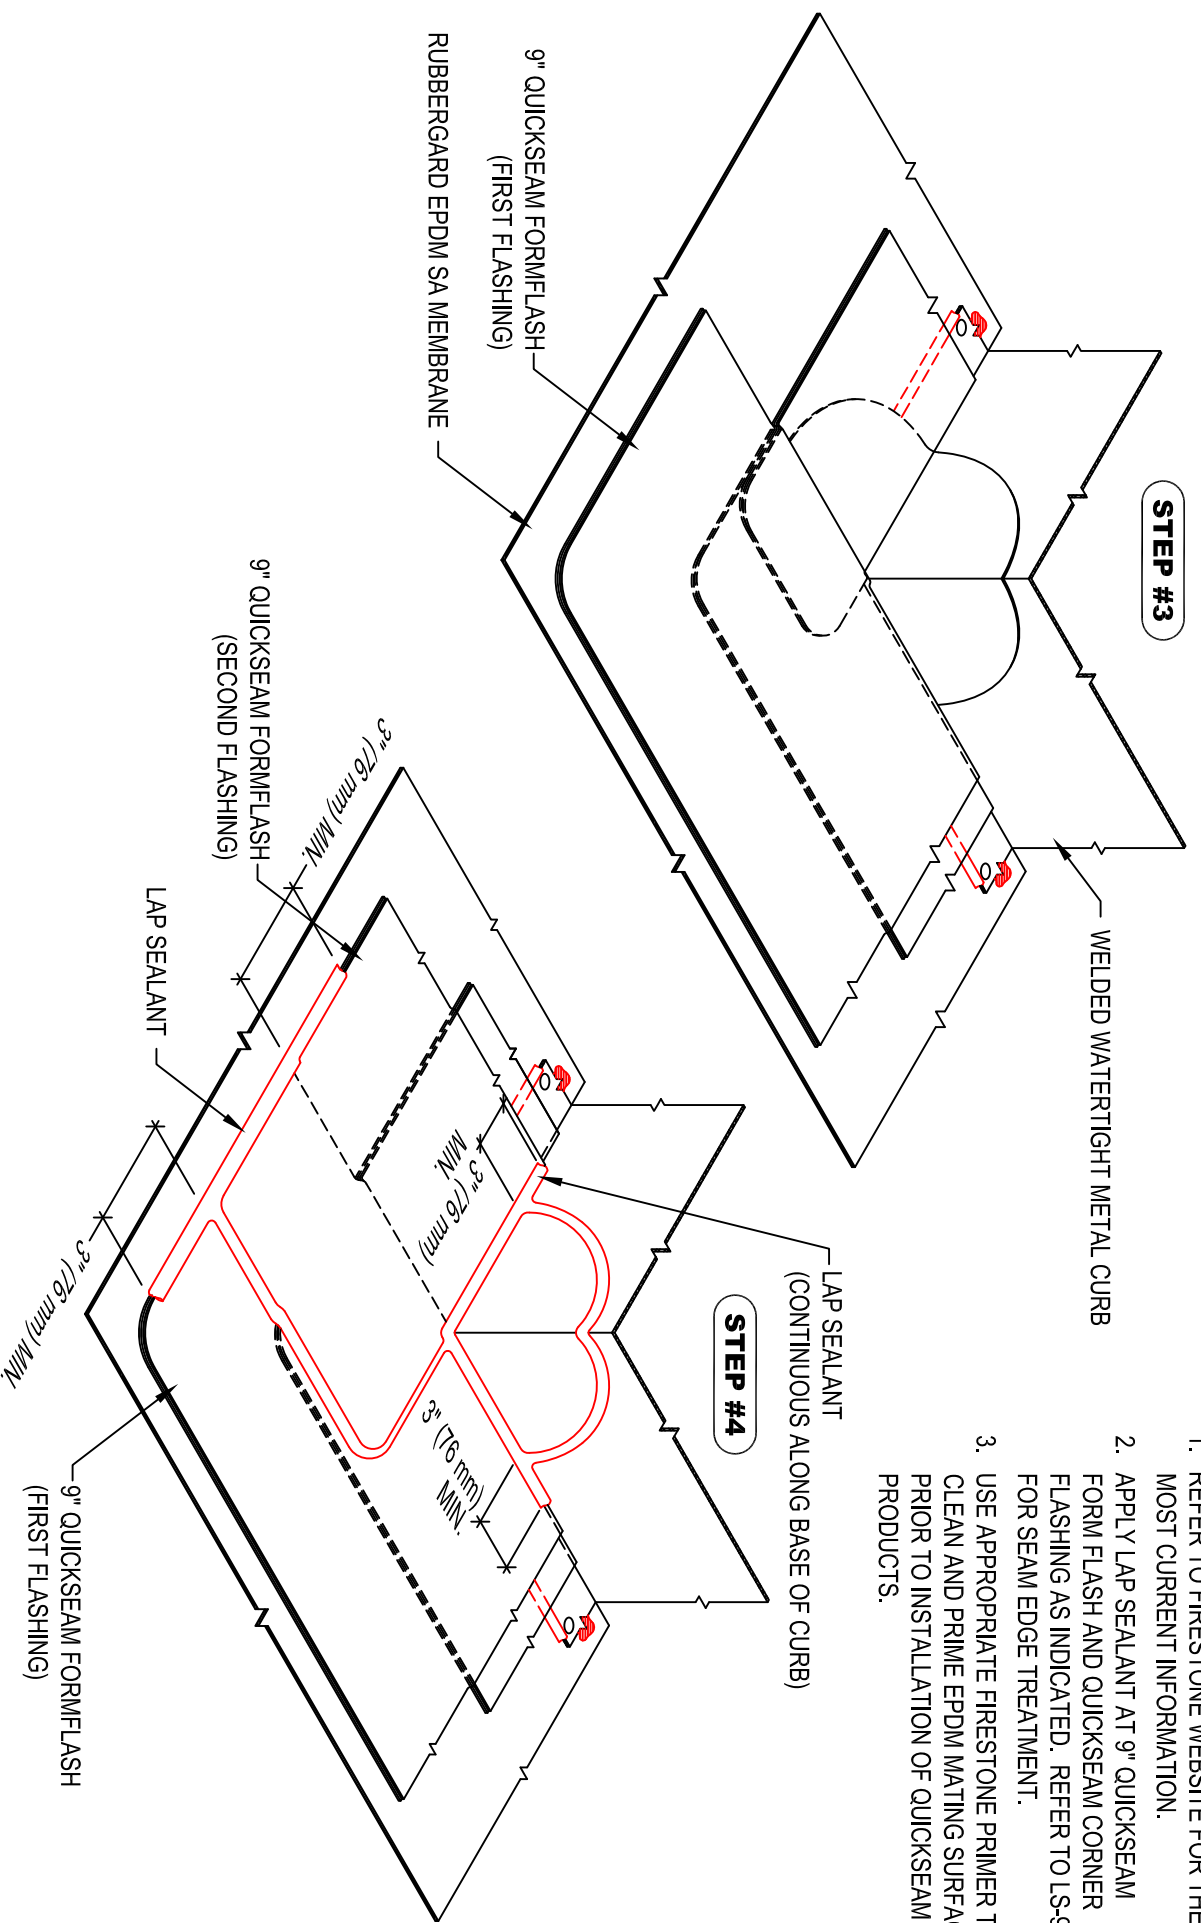

MAXIMUM WARRANTY: **20 YEARS**

**OUTSIDE CORNER AT WELDED WATERTIGHT CURB
 (FLANGES 2" - 3") INSTALLATION STEPS 3 & 4**

RUBBERGARD™ EPDM SA

ACCEPTABLE SYSTEMS: EPDM SA

ISSUE / REVISION DATE: 8/15/2017	DETAIL NO. EPDM SA C-3b
NOT TO SCALE	