



USE APPROPRIATE TERMINATION DETAIL

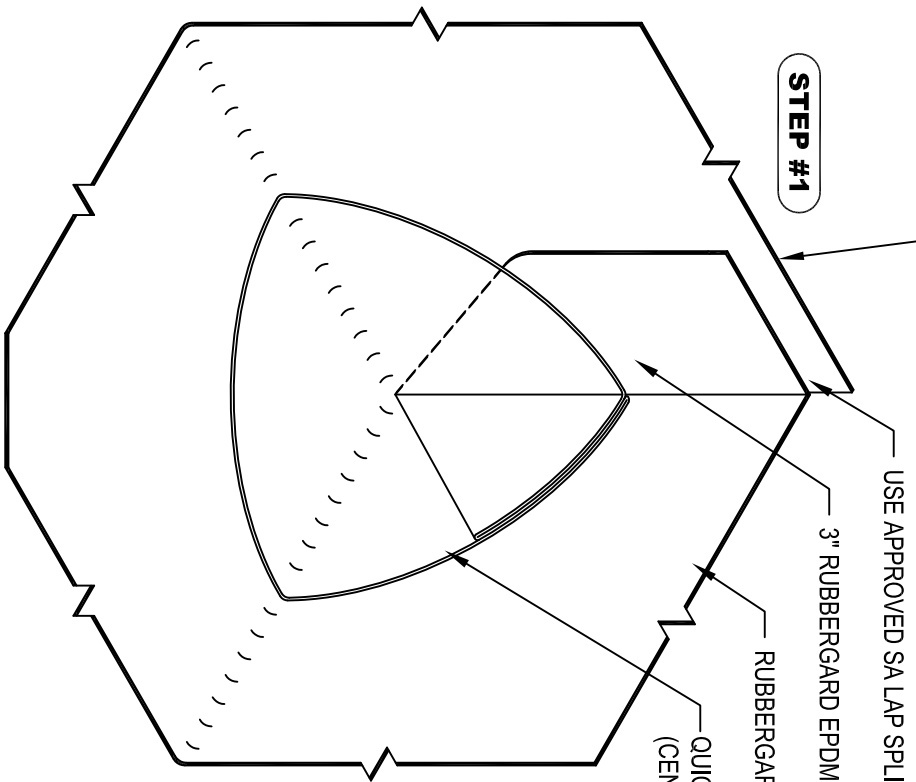

- NOTES:
1. REFER TO FIRESTONE WEBSITE FOR THE MOST CURRENT INFORMATION.
 2. APPLY LAP SEALANT ON CUT EDGES OF REINFORCED MEMBRANE AND PERIMETER OF QUICKSEAM FLASHING. REFER TO LS-9 FOR SEAM EDGE TREATMENT.
 3. USE APPROPRIATE FIRESTONE PRIMER TO CLEAN AND PRIME EPDM MATING SURFACES PRIOR TO INSTALLATION OF QUICKSEAM PRODUCTS.

STEP #2

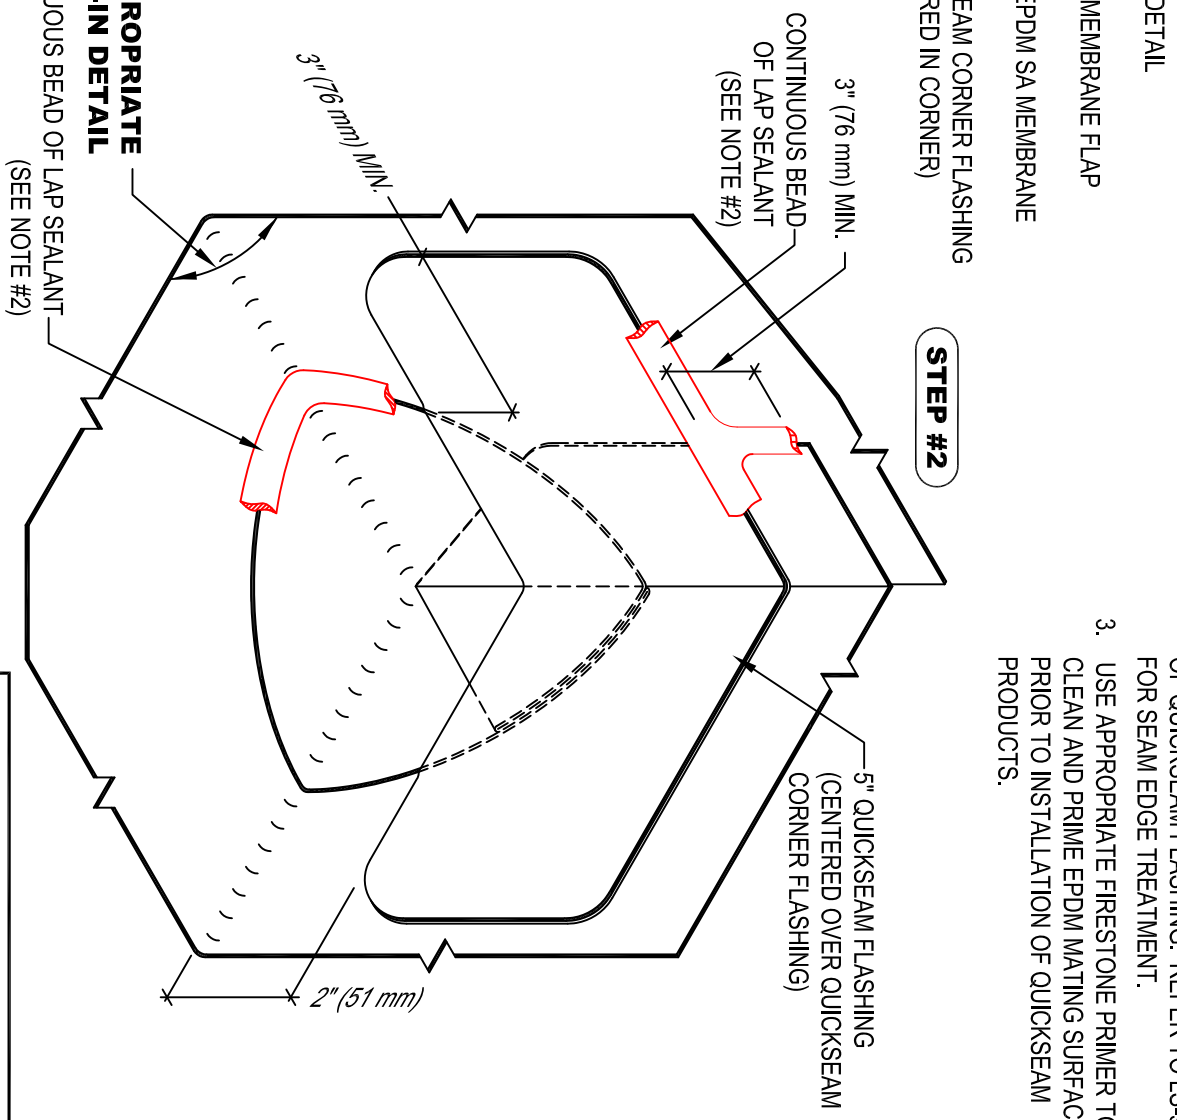

MAXIMUM WARRANTY: 20 YEARS

Firestone
BUILDING PRODUCTS

NOBODY COVERS YOU BETTER.™
www.firestonebpco.com

**INSIDE CORNER WITH 3" FLAP
INSTALLATION STEPS**

RUBBERGARD™ EPDM SA

ACCEPTABLE SYSTEMS: EPDM SA

ISSUE / REVISION
DATE: 8/18/2017

DETAIL NO.
EPDM SA C-4a

NOT TO SCALE