


USE APPROPRIATE TERMINATION DETAIL

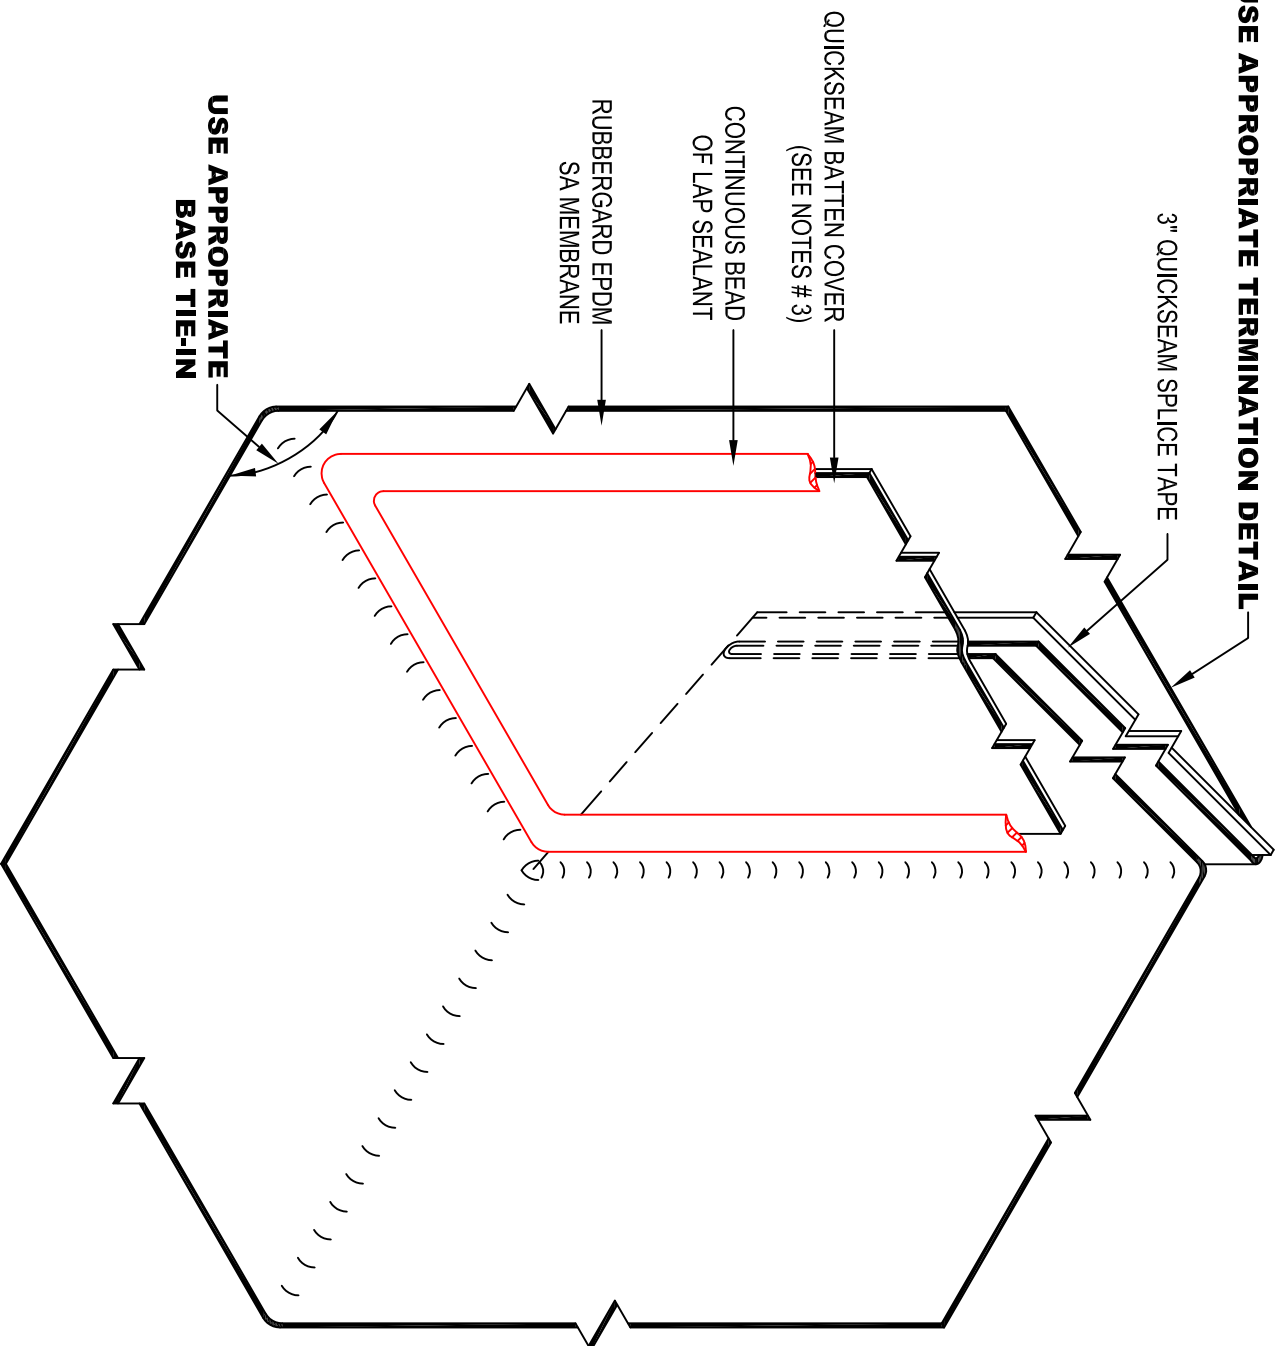

- NOTES:
1. REFER TO FIRESTONE WEBSITE FOR THE MOST CURRENT INFORMATION.
 2. APPLY SEAM EDGE TREATMENT ON CUT EDGES OF REINFORCED MEMBRANE AND QUICKSEAM FLASHING. REFER TO LS-9 FOR SEAM EDGE TREATMENT.
 3. QUICKSEAM BATTEN COVER TO BE A MINIMUM OF 6" LONG WITH T-JOINT COVER AT OVERLAP(S).
 4. USE APPROPRIATE FIRESTONE PRIMER TO CLEAN AND PRIME EPDM MATING SURFACES PRIOR TO INSTALLATION OF QUICKSEAM PRODUCTS.

MAXIMUM WARRANTY: 20 YEARS

Firestone

BUILDING PRODUCTS

NOBODY COVERS YOU BETTER.™

www.firestonebpco.com

INSIDE CORNER - FOLDED MEMBRANE WITH QUICKSEAM SPLICE TAPE

RUBBERGARD™ EPDM SA

ACCEPTABLE SYSTEMS: EPDM SA

ISSUE / REVISION
DATE:

8/18/2017

DETAIL NO.

EPDM SA C-5

NOT TO SCALE