


- NOTES:
1. REFER TO FIRESTONE WEBSITE FOR THE MOST CURRENT INFORMATION.
  2. APPLY FIRESTONE LAP SEALANT ON CUT EDGES OF REINFORCED MEMBRANE AND PERIMETER OF QUICKSEAM CORNER FLASHING. REFER TO LS-9 FOR SEAM EDGE TREATMENT.
  3. USE APPROPRIATE FIRESTONE PRIMER TO CLEAN AND PRIME EPDM MATING SURFACES PRIOR TO INSTALLATION OF QUICKSEAM PRODUCTS.

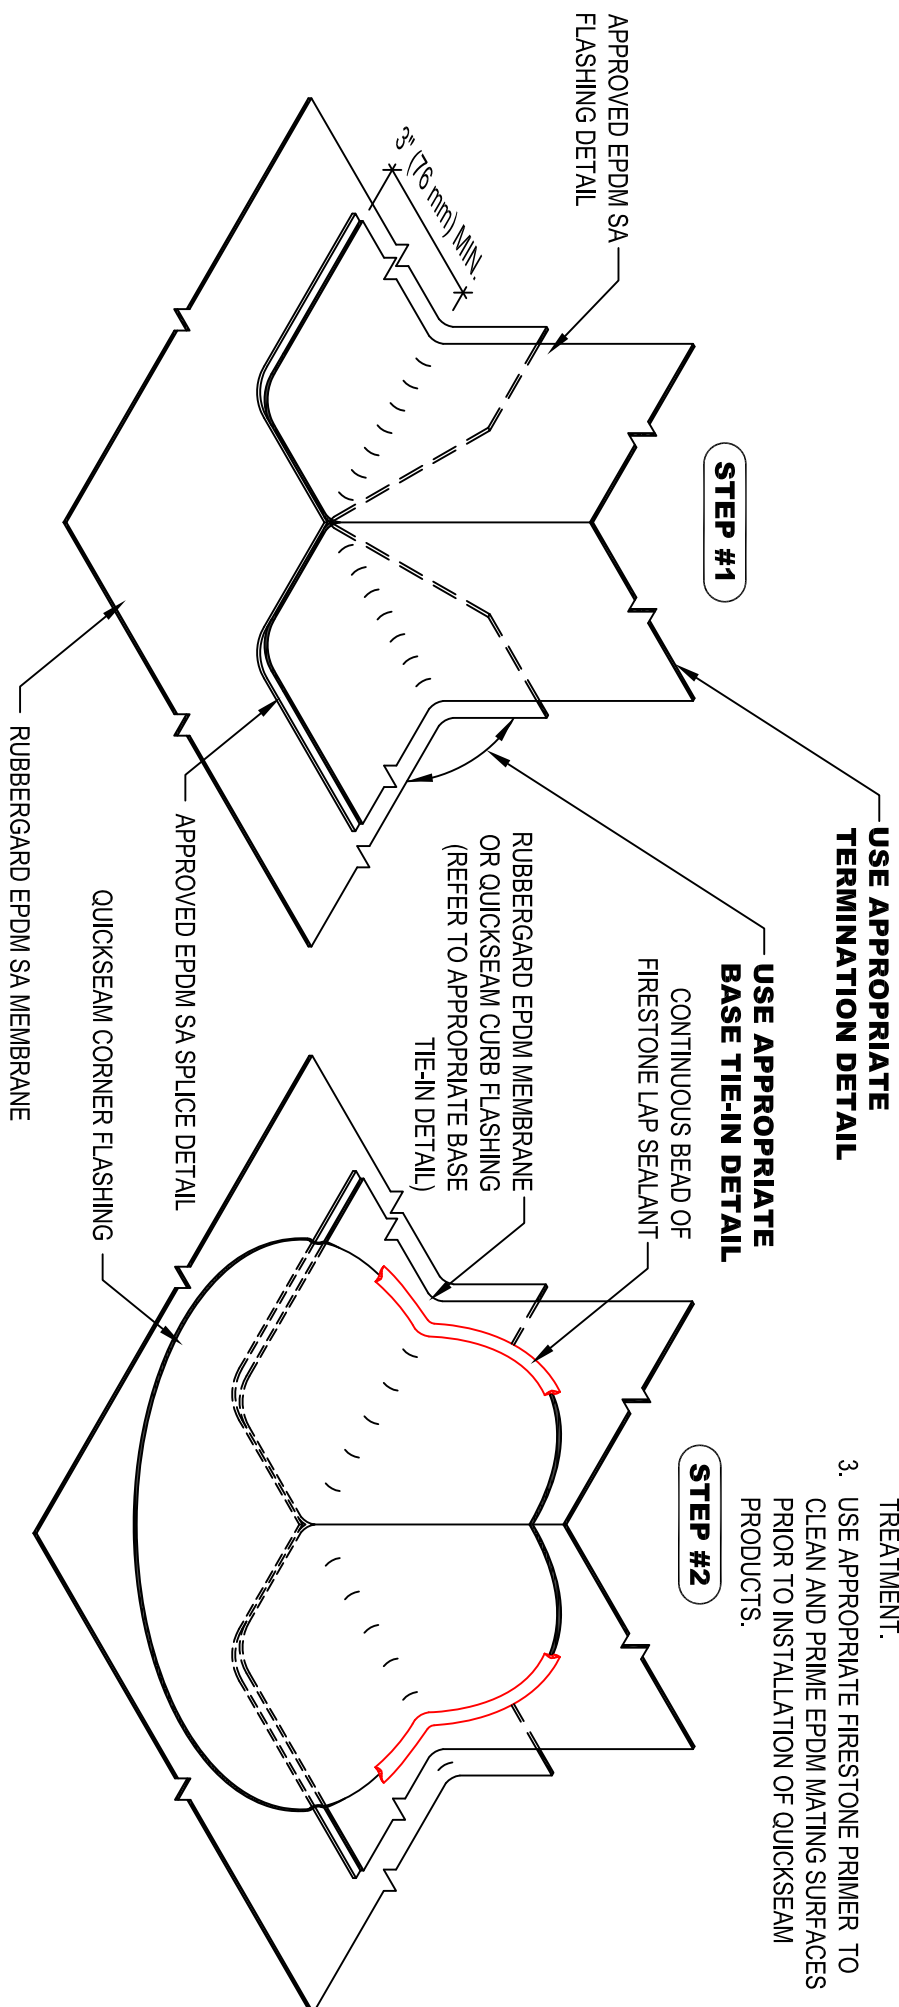

MAXIMUM WARRANTY: **20 YEARS**

**OUTSIDE CORNER WITH QUICKSEAM CORNER FLASHING  
INSTALLATION STEPS**

RUBBERGARD™ EPDM SA	ACCEPTABLE SYSTEMS: EPDM SA	ISSUE/REVISION DATE: 8/14/2017	DETAIL NO. EPDM SA C-1a
		NOT TO SCALE	